


Schulvolte Schweizer 300C

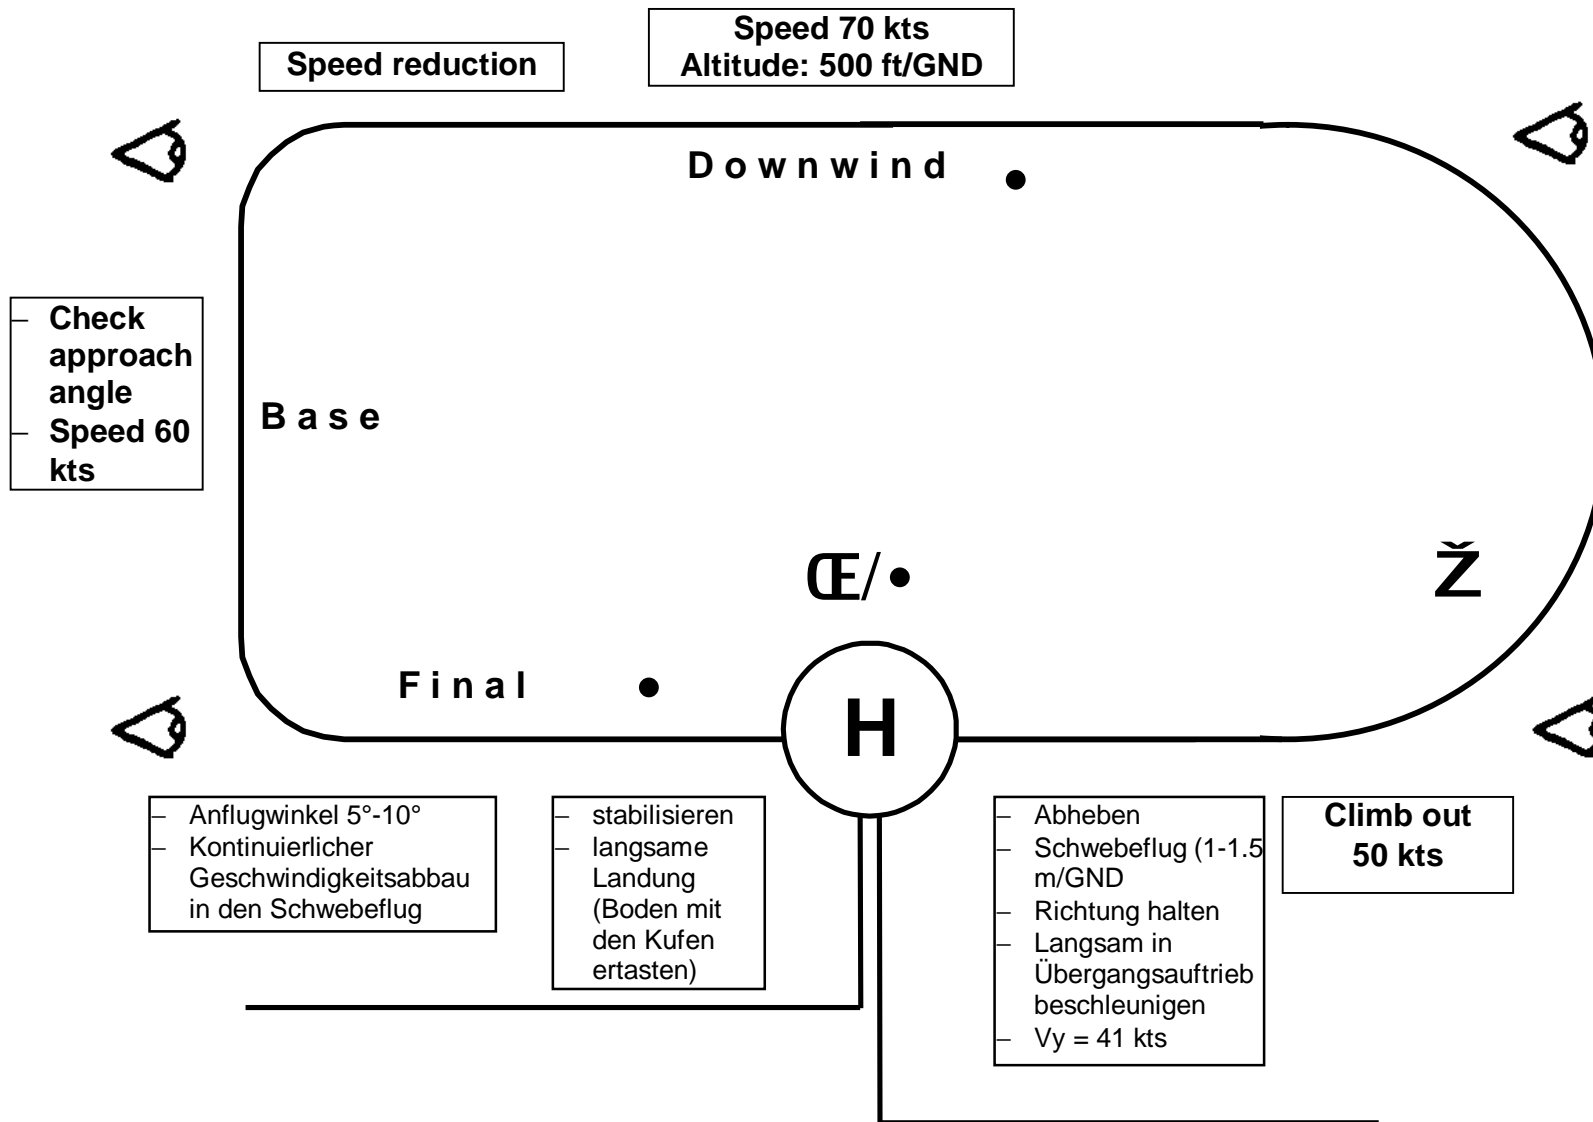

Checks

⌘ Check before take-off

1. Landing light on (apt. only)
2. ERPM 3200
3. Engine gauges green
4. Fuel quantity checked
5. Fuel boost pump on
6. No warning lights

• Check in ground effect

1. ERPM 3200
2. Manifold pressure checked
3. Wind
4. Take-off axis clear

Ž Climb check

1. Speed
2. Vertical speed
3. Landing light off (apt only)

• Check for approach

1. Landing light on (apt. only)
2. ERPM 3200
3. Engine gauges green
4. Fuel quantity checked
5. Fuel boost pump on
6. No warning lights

• Final check

1. Speed
2. Vertical speed
3. Decision (land or go-around)